

T4 glare shield was designed for the Bullard T4 Thermal Imager to enhance viewing in bright, outdoor environments by eliminating glare

Installation:

- 1.) Place the glare shield in your hands with the strap facing away from your body and the Bullard embossed logo face up. The nose "notch" should be at the bottom half of the shield, facing your body.
- 2.) With your thermal imager lens pointing down and the LCD screen facing up, tilt the glare shield slightly forward (away from the body), allowing the rubber housing to overlap the boot at the top of the camera screen.
- 3.) Gently pull forward and down to create a seal around the lens. (If you are not able to create this seal, use your finger(s) to properly seat the glare shield) (Figure 1).
- 4.) Next, tighten the tension of the securing strap using the pull tab. The glare shield is now securely seated on the imager (Figure 2).
- 5.) To remove, loosen strap with the pull tab, place both hands around the base of the shield and lift straight off.

Lens Replacement Instructions:

- 1.) Take the polycarbonate lens and the magnifying lens and place on top of one another, with the smooth side out. The "rough" side should be sandwiched in between the lenses (Figure 3).
- 2.) With the widest portion of the glare shield facing you, gently pull the rubber housing apart and seat the lenses inside the grooves.

Order part number T3GLARESHIELDLENS

CAUTION

When using the T4 glare shield with T4 Thermal Imagers, do not position the viewing display toward the sun for extended periods, especially during non-use. The magnification elements within the glare shield will cause damage to the display when exposed to direct sunlight. Detach the glare shield when not in use. Bullard will not warrant repairs resulting from sun damage involving the glare shield optics.



Fig.1



Fig.2

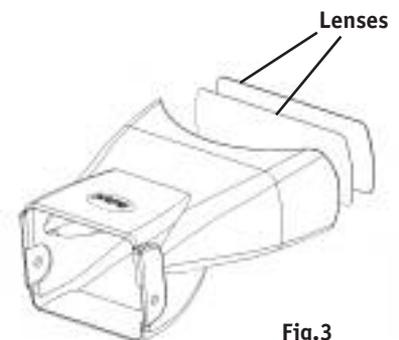


Fig.3



ISO 9001
certified

Bullard
1898 Safety Way
Cynthiana, KY 41031-9303
Toll free: 877-BULLARD (285-5273)
Tel: 859-234-6616
Fax: 859-234-8987
www.bullard.com

Bullard GmbH
Lilienthalstrasse 12
53424 Remagen
Germany
phone: 0049-2642 999980
fax : 0049-2642 9999829
www.bullardextrem.com

Bullard Asia Pacific Pte. Ltd.
Cisco Centre
20 Jalan Afifi, #08-03
Singapore 409179
Tel: (65) 6745-0556
Fax: (65) 6745-5176
www.bullard.com

©2006 Bullard. All rights reserved.
Bullard is a registered trademark of Bullard.