



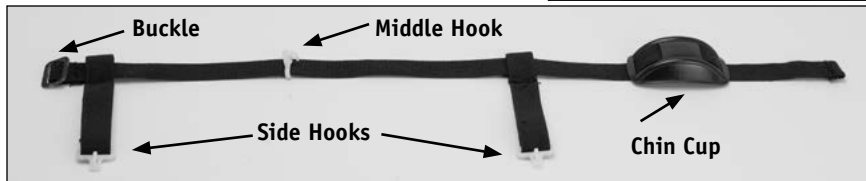

3-Point Chinstrap Instructions for Installation

1. Locate the middle white hook. From the inside out, attach it to the back of the hard hat.
2. From the inside out, attach the remaining white hooks to the sides of the hard hat.
3. Thread the loose elastic through the buckle for a secure fit.

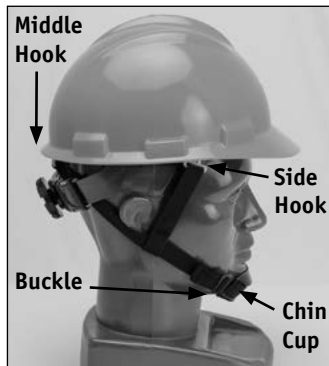



3-Point Chinstrap Instructions for Installation

WARNING

Chinstrap assembly should be inspected routinely for any damage due to abrasions, rough treatment, or wear.

Chinstrap assembly should lay flat against the head when in use; remove any additional twists in webbing.

Chinstrap assembly should only be worn when suspension is assembled with the hard hat shell facing forward.

Americas:

Bullard

1898 Safety Way

Cynthiana, KY 41031-9303 • USA

Toll-free within USA: 877-BULLARD
(285-5273)

Tel: +1-859-234-6616

Fax: +1-859-234-8987

Europe:

Bullard GmbH

Lilienthalstrasse 12

53424 Remagen • Germany

Tel: +49-2642 999980

Fax: +49-2642 9999829

Asia-Pacific:

Bullard Asia Pacific Pte. Ltd.

LHK Building

701, Sims Drive, #04-03

Singapore 387383

Tel: +65-6745-0556

Fax: +65-6745-5176



www.bullard.com

©2013 Bullard. All rights reserved.

60810010555B (0613)